



ANEXO III: Mapa del aeropuerto



PLANO DE AERÓDROMO-OACI

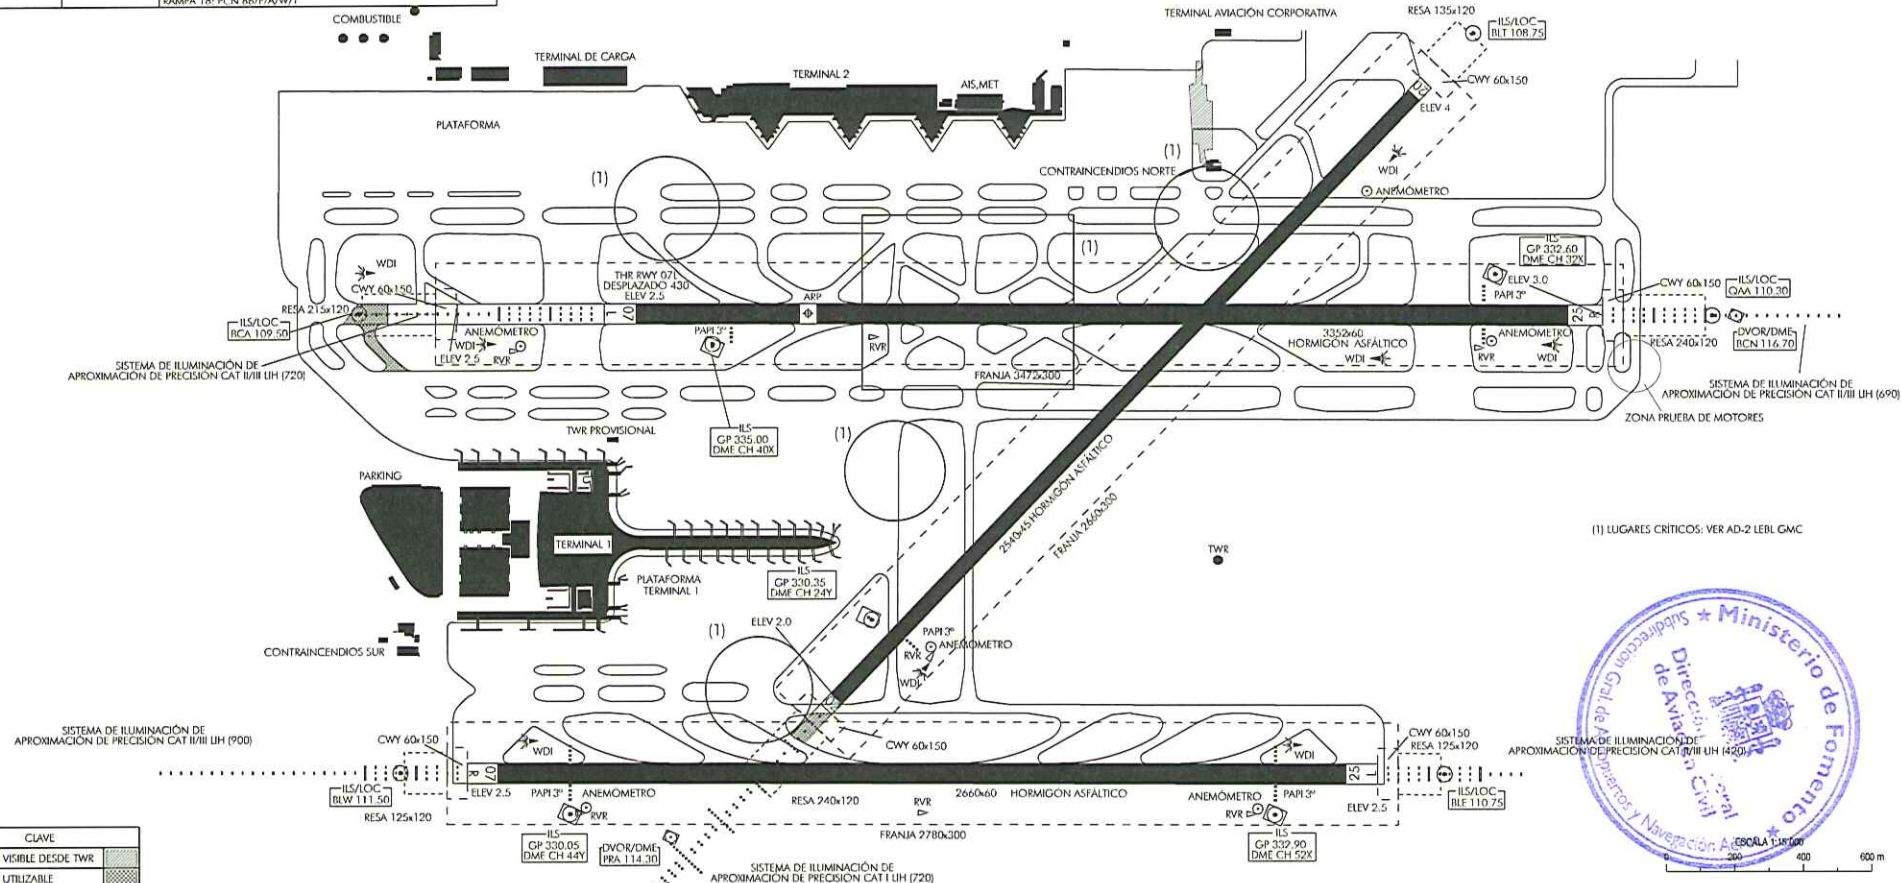
41°17'49"N
002°04'42"E

ELEV 4 m

TWR 118.100
118.325
CLR 121.800GMC W 121.700
GMC E 121.850GMC SC 121.650
GMC SN 122.825
GMC SS 122.225

BARCELONA

RWY	DIRECCIÓN	THR	RESISTENCIA
02	020°	41°17'15.93"N 002°05'05.41"E	RWY 02/20: PCN 91/F/A/W/U RWY 07L/25R: PCN 99/F/A/W/U RWY 07R/25L: PCN 126/F/A/W/U TWY DE RWY 07L/25R: M: PCN 88/F/A/W/T, EXC M-1: PCN 75/R/A/W/U, M-2 A M-4: PCN 61/F/A/W/U N, Q-14 Y SALIDAS RÁPIDAS ASOCIADAS: PCN 88/F/A/W/U, EXC N-1, Q-1: PCN 75/R/A/W/U, N-2 A N-4: PCN 61/F/A/W/T S: PCN 61/R/A/W/U, EXC S-1: PCN 75/R/A/W/U, S-11 A S-13: PCN 87/R/A/W/U T Y SALIDAS RÁPIDAS ASOCIADAS: PCN 146/F/A/W/U, EXC T-1: PCN 75/R/A/W/U, T-2: PCN 61/F/A/W/U V, W: PCN 70/R/A/W/U Y, Z: PCN 61/F/A/W/T TWY DE RWY 07R/25L: E, D: PCN 61/F/A/W/U K Y SALIDAS RÁPIDAS ASOCIADAS: PCN 61/F/A/W/U, EXC K-1, K-11, G-1 A G-3, G-10 A G-12: PCN 122/R/B/W/U J: PCN 88/F/A/W/T TWY DE RWY 02/20: U: PCN 146/F/A/W/U PLATAFORMA: RAMPA 0: PCN 50/R/B/W/U RAMPA 1 A 4: PCN 79/R/B/W/U RAMPA 10 A 17: PCN 70/R/A/W/T RAMPA 18: PCN 88/F/A/W/T
20	200°	41°18'33.83"N 002°05'40.95"E	
07L	067°	41°17'41.44"N 002°04'19.02"E	
25R	247°	41°18'20.61"N 002°06'13.43"E	
07R	067°	41°16'56.32"N 002°04'27.66"E	
25L	247°	41°17'31.99"N 002°06'11.81"E	

ELEVACIONES Y DIMENSIONES EN METROS
LAS MARCACIONES SON MAGNETICAS

(1) LUGARES CRÍTICOS: VER AD-2 LEBL GMC

CAMBIOS: LUGARES CRÍTICOS

CLAVE
ZONA NO VISIBLE DESDE TWR
ZONA NO UTILIZABLE

AIS-ESPAÑA



AMDT 192/10